


Parallel-Series X-Pattern Wiring Diagram for Two Different Pairs of Speakers

Parallel-Series X-Pattern Wiring

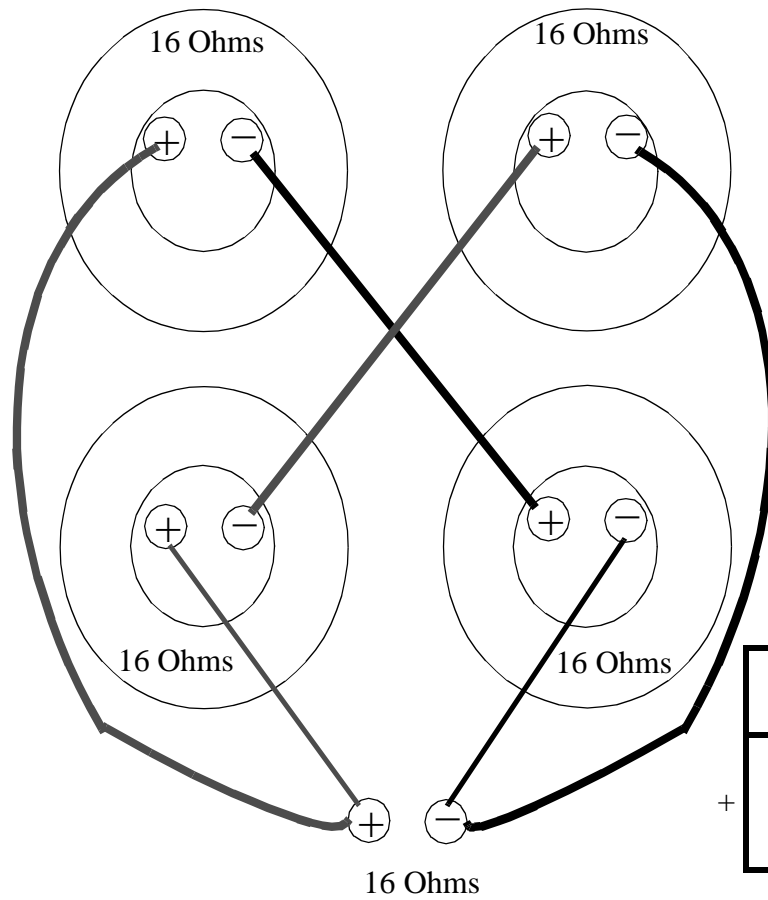

Four 16-Ohm speakers wired in parallel-series to yield a total load of 16 Ohms.

Formula:

$$\left[\frac{1}{\frac{1}{16+16} + \frac{1}{16+16}} \right] = 16$$

Schematic View

